



Instruction manual for Arida S7L Deluxe dehumidifier with drying rotor



Please read this instruction manual carefully
and keep it for future reference.

Edition for July 2020

Thank you for choosing Arida. We really appreciate that.
Feel free to write a product review where you bought the product.

SAFETY INSTRUCTIONS

CAUTION

This dehumidifier must not be used in rooms with the following conditions:

Explosive environments

Aggressive environments

Air with solvents

Air with a lot of dust

For indoor use only in private homes

Keep children and animals away: Do not allow children or pets to play with or around the dehumidifier or do anything else that could cause injury. Make sure that the device is not accessible to children when not in use. This appliance can be used by children aged 8 and up and people with reduced physical, sensory or mental abilities or lack of experience and knowledge, if they are supervised or instructed on the use of the appliance in a safe way and understand the dangers of this product.

Use a grounded electrical outlet: Always use the unit with a grounding plug and a grounded electrical outlet with a ground fault circuit interrupter. A grounded electrical outlet is an important safety feature that helps reduce the risk of shock or fire.

Protect the power cord from damage: Do not lay the power cord under carpets, or cover with carpets or runners. Lay the cord away from areas where it can be tripped over. Never use the device with a damaged power cord, as this may result in electric shock or fire hazard. If the power cord is damaged, it must be replaced by the importer with an approved cord of the same type and amperage.

Extension cords: Avoid using extension cords, as they may overheat and cause a fire hazard. Extension cables can also cause voltage drops that will affect the dehumidifier so that it can be damaged.

Treat with care: Rough treatment can damage components in the dehumidifier.

The dehumidifier is intended for temporary control of the humidity level during the dehumidification season.

Stable surface: The dehumidifier must always be placed on a stable, level surface, for example on the floor or a table top, so that the dehumidifier cannot fall down and cause damage.

Keep away from water: The dehumidifier must never be left in water, as this can lead to the risk of injury and electric shock. Do not store or use outdoors. If electrical wires or components get wet, allow them to dry before using the device.

Keep the air intake open: Do not clog or block the air intakes by placing the dehumidifier too close to curtains, walls or anything that will restrict the air intake on the dehumidifier. This can cause the unit to overheat and cause a fire or electrical hazard.

Keep the air filters clean: The dehumidifier has two air filters. It is a pre-filter that needs to be vacuumed. Make sure that the filter does not clog, as this may cause the dehumidifier to overheat. It must never be used without a filter. Always check, and if necessary, clean the filter before switching on the dehumidifier. Do not allow oil, grease or other contaminants to be drawn into the dehumidifier. Do not clean the dehumidifier with organic solvents.

Clean filter is important: Check the filter regularly to keep it clean according to the instructions in this manual. A dirty filter will restrict the air flow into the machine, this will increase the resistance of the fan and can lead to damage that can void the right to make a complaint. A clean filter will give you better power, lower power consumption and longer life.

Keep electrical components dry: Water must not enter the electrical components of the dehumidifier. If these areas have become wet, dry them before using the dehumidifier. If in doubt, do not use it.

When using "clothes dryer": To dry wet clothes in the room, keep the clothes at a safe distance from the dehumidifier to prevent water from dripping onto the unit.

Turn off: Never disconnect the power cord without pressing the "Power" key first, as this may damage the unit. Never disconnect the power cord until the fan has stopped blowing. Always pull out the device when it is not in use or needs to be moved. To disconnect the power supply, grasp the plug and unplug it. Never pull on the cord.

Repairs: To repair the unit, contact the importer or an authorized workshop.

Repairs carried out by unqualified persons may cause damage to the device or damage to persons or property and void the warranty.


1. GENERAL ADVICE

Before putting your dehumidifier into operation for the first time, study the instruction manual carefully.

After receiving the device, check your dehumidifier for any transport damage. In case of damage, you must inform the sender immediately.

Store the packaging for the dehumidifier in a safe place so that it can be sent safely. To save space, you can simply cut through tape with a knife and fold the cardboard box. Please keep all packaging away from children and recycle the packaging if you decide to throw it away.

2. INSTALLATION AND FIRST TIME USE

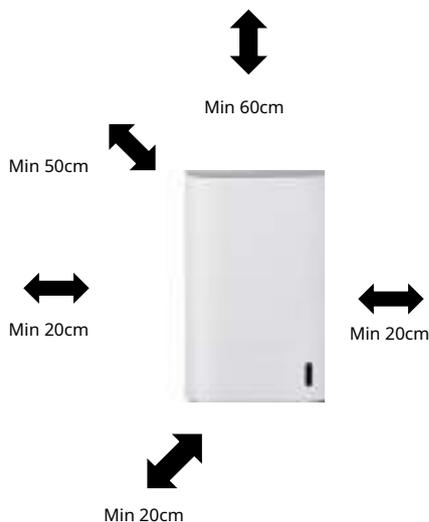



- Place the dehumidifier in an upright position on a stable, flat surface.

- Make sure the unit is a safe distance from the wall, curtains and furniture.

Keep clothing at least 30cm away from the air inlet and outlet to prevent water from dripping into the unit.

- Make sure that the tank is correctly mounted, if the tank is full or not in place, a "Full" light will come on, an alarm will sound and the dehumidifier will switch off.


3. DESCRIPTION OF THE DEHUMIDIFIER

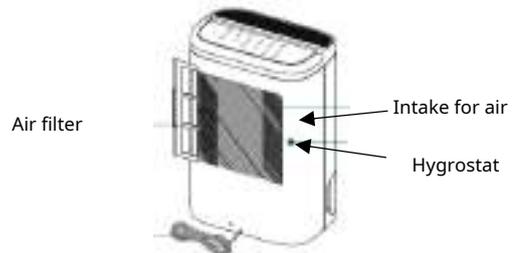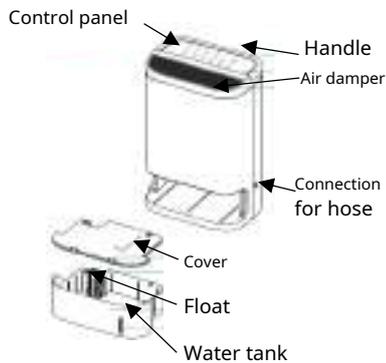

Clean filter is important:

The filter must be vacuumed frequently. A clean air filter is important to ensure a good drying effect and a low power consumption. Most problems with a drying rotor-based dehumidifier are caused by poor cleaning. It is therefore important to ensure clean air filters. Never use the dehumidifier without a filter. During normal use, the filter must not be replaced, it lasts the entire life of the appliance.

4. CONTROL PANEL

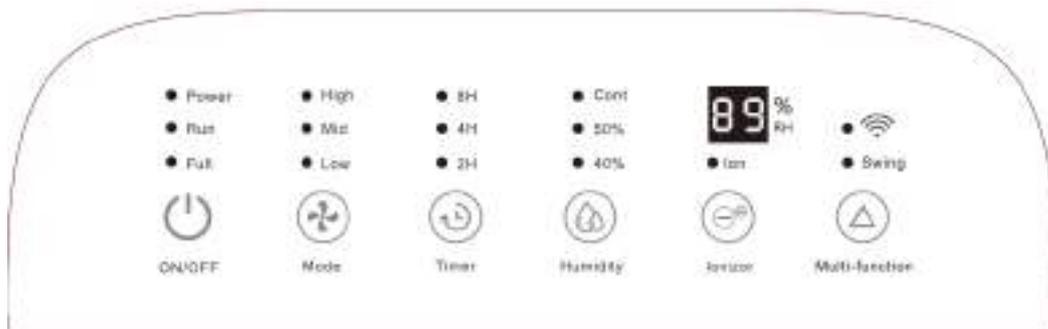

On and off: Here the dehumidifier is switched on or off. The correct mode (button 2) and humidity (button 4) must be set. The fan will always be in operation 4 minutes after the dehumidifier is switched off (power lamp lights up red). This is to cool the dehumidifier.

It is important that the air damper is always open when the dehumidifier is started. It must be closed when not in use so that nothing gets into the dehumidifier.

2. Fan speed (Mode): There are 3 fan speeds that can be used. Press the button to set the desired speed.

3. Time setting (Hours): If clothes are to be dried or you want the dehumidifier to run for a short period, this function can be used. Press the button to select how many hours the dehumidifier should be in operation. The dehumidifier must be restarted after this period.

4. Humidity: There are 3 choices for humidity 50 - 60 and continuous. Press the button to set the desired humidity. If continuous operation is selected, the dehumidifier will stop after 8 hours, it must then be restarted. The other settings will not stop until the set humidity is reached. After that, the dehumidifier will start the fan after 30 minutes to see if there has been more humidity in the air.

5. Ionizer: In this mode, the ionization is active. It can remove any odor and connects the dust particles in the air.


6. Multifunction: If the button is pressed once, the air damper will start going up and down. If the button is pressed for a long time, wifi will be activated.

The Smart Life app must be downloaded to your phone to get in touch with the dehumidifier.




7. Display: This shows an indication of humidity and will not be completely accurate.

5. WATER COLLECTION

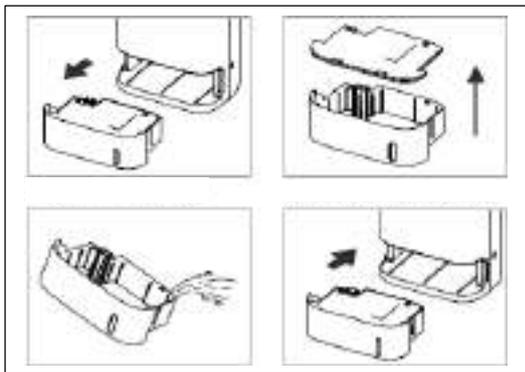

The dehumidifier has a built-in tank, which the water will automatically drip into. When the tank is full, the dehumidifier will switch off and the light for the full container will light up. The tank must now be removed, emptied and put back. The dehumidifier will now restart with the same settings it was set with before the tank was full.

6. CONNECTION OF HOSE

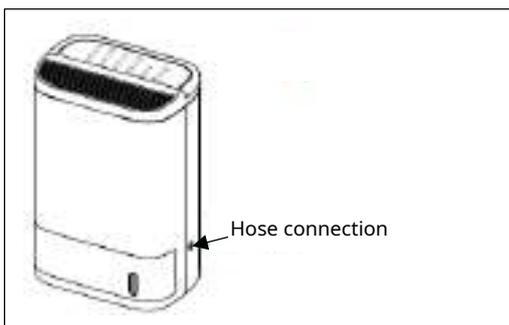

If you want to drain away the water, this can be done via the water outlet. Make sure the hose has a fall all the way down to the drain. If the hose is blocked, bent or going upwards, the water will enter the tank and the dehumidifier will stop when the container is full. If the hose is removed, the water will go into the water tank.

7. CLEANING

Before cleaning, always switch off the dehumidifier with the power button. Wait until the fan stops running. Then unplug the power cord. Use a soft cloth with mild soap to wipe it clean. The filter must always be vacuumed.

8. TECHNICAL DATA

Voltage	220 ~ 240V, 50Hz
Power consumption / power	650w
Dehumidification capacity	7 liters per day
Airflow	200 m ³ per hour
Fan speeds	3
Water tank	2.5L
Working temperature	1 ~ 50 degrees
Timer	1-8 hours
Dimensions (width x depth x height)	300 x 200 x 455 mm
Weight	5.7 kg

9. TROUBLESHOOTING

Problem	Solution
The dehumidifier is completely dead.	<ol style="list-style-type: none"> 1. Is the power cord plugged into an electrical outlet? 2. The water tank is not inserted or full. 3. The dehumidifier is not level.
The dehumidifier does not take out water.	<ol style="list-style-type: none"> 1. The air filter is full of dust. 2. A foreign element is stuck in the air intake. 3. The humidity in the room is too low.
The dehumidifier is not effective.	Doors, windows or vents may be open. <ol style="list-style-type: none"> 2. There is too much inflow of moisture. The room it is located in is too big.
Abnormally noisy.	<ol style="list-style-type: none"> 1. The air filter is clogged. 2. It is not level or on a level surface.
The dehumidifier leaks water.	<ol style="list-style-type: none"> 1. The dehumidifier is not level. 2. The float is stuck. 3. The dehumidifier is tight inside dust and needs service.
The fan runs even if the dehumidifier has been switched off.	The fan will always run for 4 minutes after the dehumidifier is switched off to cool it down.
The display shows the wrong value	The value that emerges is an indication of the humidity level in the air and will not be completely correct. <ol style="list-style-type: none"> 2. If the dehumidifier is at rest, the display will not show the correct value until it starts up the fan.
The dehumidifier does not start even if it is damp.	During the dormant period, the dehumidifier can show high humidity and it will not start until the dormant period is over.



Bedre inneklimate as

– vi hjelper deg gjerne!

Tlf: 33 47 01 00

Hverdager 08.00 - 16.00

better-inneklimate.no